


ShedBlog

Retroseal Superseal should be positioned with the clip at around 45 +/- degrees. We recommend locating the receiver strip first tightly against the inside of the tin and locating the clips next. Instructions recommend screw fixing strip to wall cladding. Do not over-rotate clips as this can push the tin away. Optional - If you want a next-level seal you can run a bead of silicon along the edges.

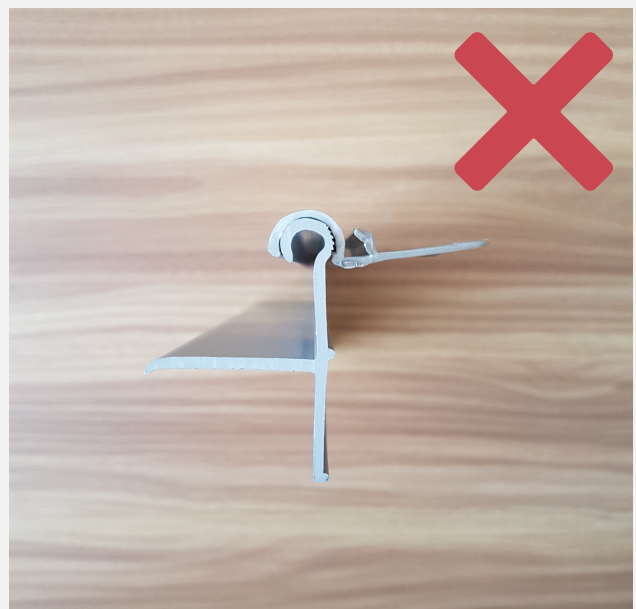

Clips pictured are 3A & 4A Trimdek / Mono clad / Trimclad ETC